



TRNSYS 17

Installation Guide:

1. If you want to use TRNSYS 3d, please install SketchUp in advance, else go on with 2.
2. Install TRNSYS 17 (the folder C:\TRNSYS is recommended)
 - a. Optional: Activate checkbox TRNSYS 3d (SketchUp Plug-In for 3D-Building input)
 - b. Optional: Activate checkbox TRNviewSHMISM (Tool for Visualizing the shading and distribution matrices)
3. Copy your license file „user17.id“ into the TRNSYS folder
4. Activate your TRNSYS 17 Installation, by starting TRNSYS Studio
 - a. The first time you launch the Studio, a window will pop up containing a code that corresponds to the processor of your computer and a link to a website. Click the link and you will arrive at the following website
<http://sel.me.wisc.edu/trnsys/trnsys17registration.html>
 - b. The website contains links to each of the TRNSYS Distributors. Click on the “Register your TRNSYS 17” link listed underneath the Distributor from whom you purchased TRNSYS 17; you will be redirected to a second webpage.
 - c. Enter the E-Mail address your TRNSYS license is registered to.
 - d. Paste the access code that the Simulation Studio displayed
5. Your installation is successfully completed, if you encounter any problems oder questions during the installation, you can contact us hotline@transsolar.com.

Uninstallation Guide:

1. Return your license by clicking on the button “Return license“ in the menu item ?->about (Please make sure that you have internet access during this process step).
2. BackUp your license file „user17.id“
3. Uninstall TRNSYS by using the window program manager